


CPZ504 – PTZ camera ID change


To connect Cpcam PTZ camera with PC based DVR, PTZ needs to connect to Cpcam DVR to change ID number before further installation.

1. Connecting PTZ via RS-485 port

Device :

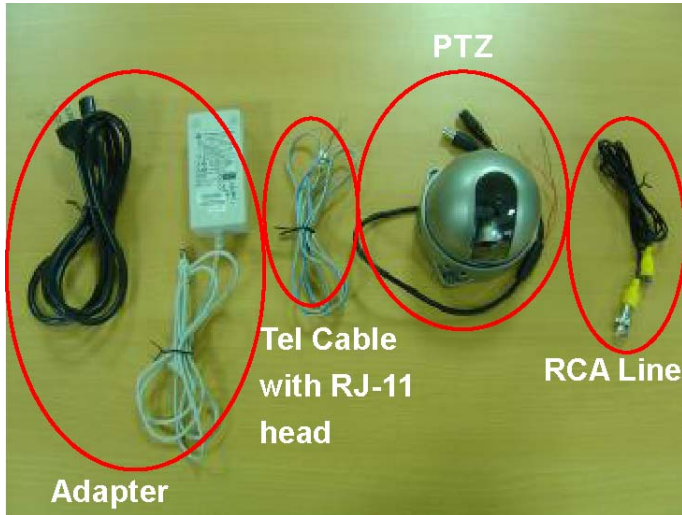

2. Connect : 1.PTZ control 2.Power 3.Video

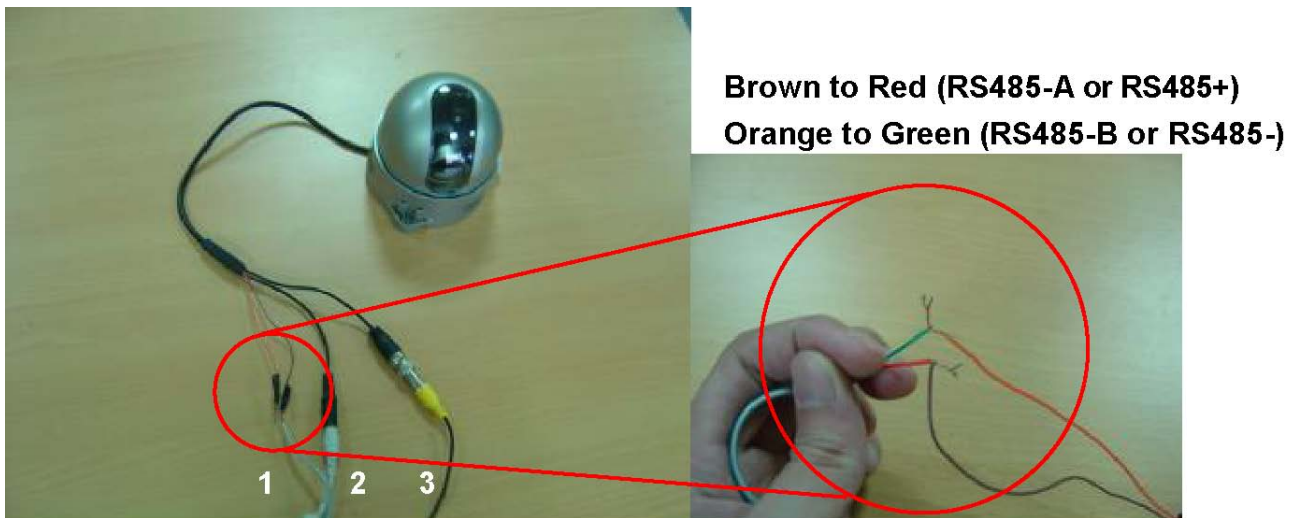

PS: You could switch the wire connection in opposite way if it is not working as the connection in the picture. The telephone cable may have wire jumping.

3. Switch device from Camera to PTZ



4. ID setting : If RS485 connect properly, DVR will detect “CAMERA ID” and show it on the screen as the red circle in the picture below. Then, key in the number of CAMERA ID to “CURRENT ID” field and key in a new ID number at “SET ID” field. Click on “SET OK” to save setting.



5. After click on “SET OK”, CAMERA ID will change to new ID number. We recommend using #002 or greater on CAMERA ID when it is going to connect with PC based DVR.