


# APPENDIX #1 – DVR CONTROL

1) Connect the Sub-D plug of Video Web Server with our own brand DVR products.

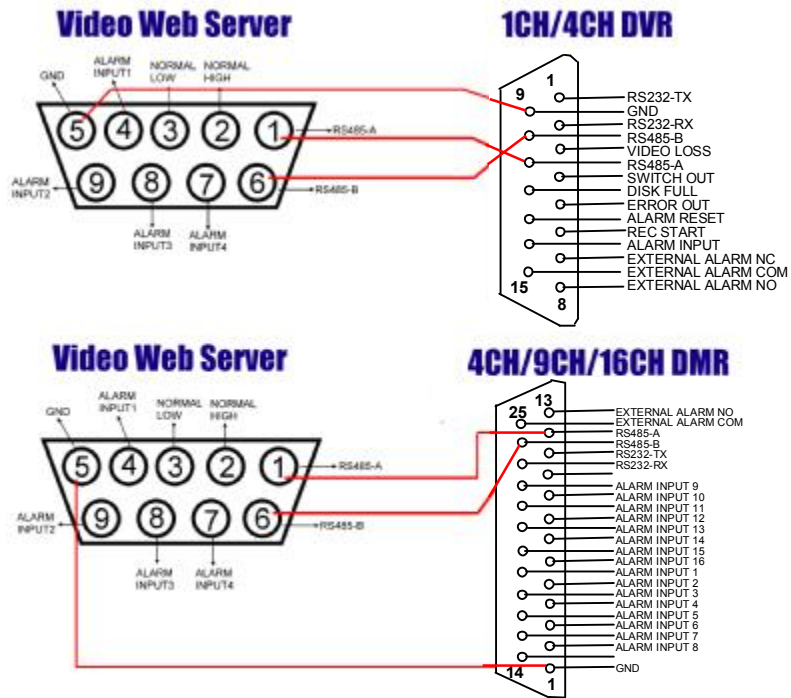


2) Set the “Remote” function in the DVR products.


NOTE :

Remote mode : RS-485, Baud rate : selectable, ID : same as “Peripheral Control” in the Video Web Server.

**A. 1 / 4 CH DVR**

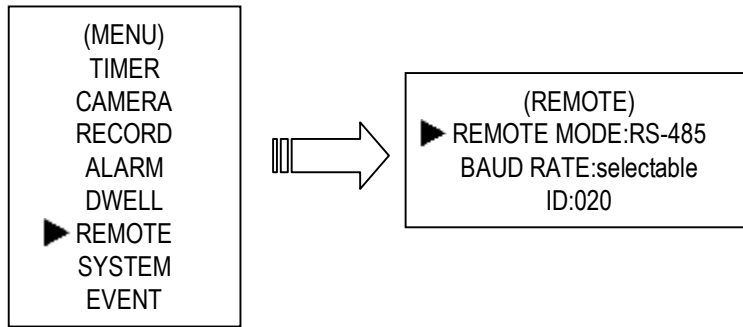

**B. 4 / 9 / 16 CH DMR**

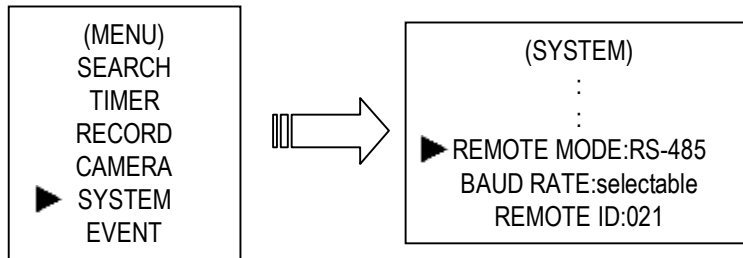

3) Set the “Peripheral Control” in the system config of Video Web Server.

